


BENEFITS WITH USING XAVITECH FLOW CALIBRATION UNIT

- Easy calibration of pump flow
- Shorter R&D time
- Reduce power consumption with correct flow calibration
- Reduce pump noise

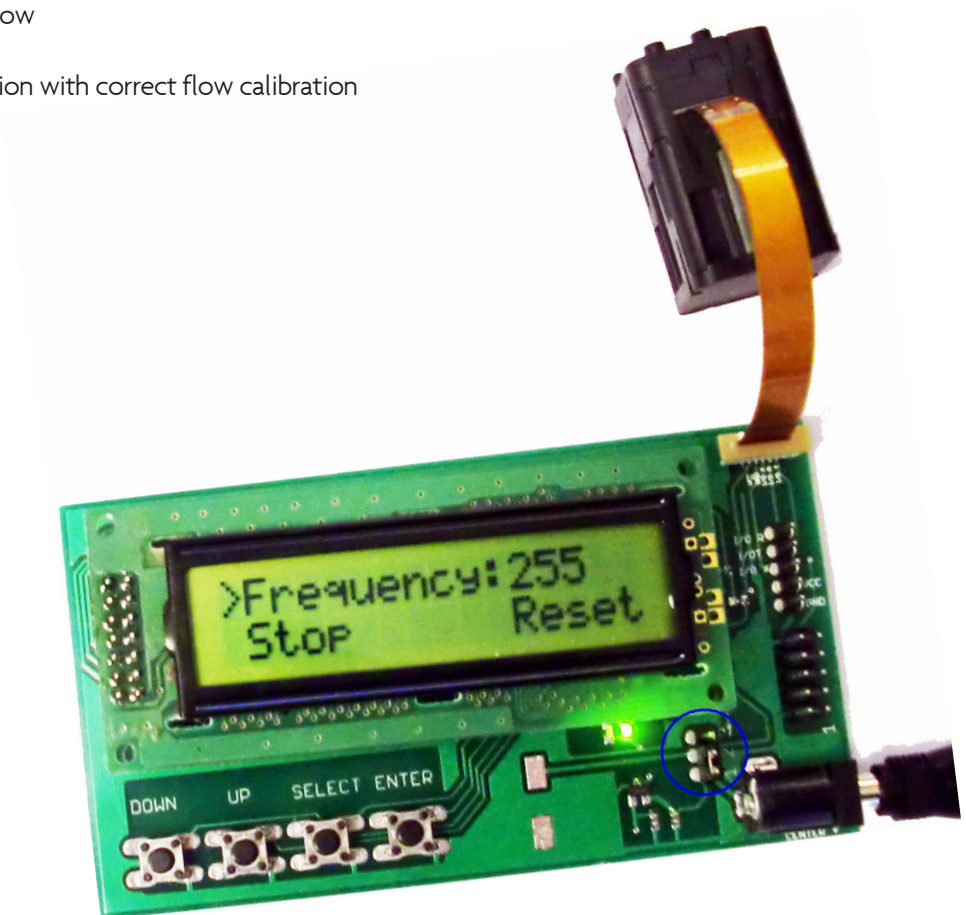

FLOW CALIBRATION UNIT

Xavitech can supply calibrated pumps according to customer needs. Just as important, the customers can also adjust the pump performance themselves. This is really valuable during the design phase of a system since the user will be able to compensate for condition changes simply by reprogramming the pumps. Once the system layout is fixed the customer can inform Xavitech on which pump setting was the best. Hereafter, Xavitech can easily supply calibrated pumps according to the new requirements. Such a procedure implies a quick production transfer which saves time and costs for the user.

The flow calibration unit will enable the user to adjust the flow through altering the pump frequency and store setting permanently into the pump memory. The flow calibration works with all Xavitech BLACK edition pumps with Flex connection.

GENERAL DATA

Calibration unit supply: 12 V DC (centerpin +)
Pump supply: See mode description



USING THE CALIBRATION UNIT

On the picture above you can see a blue circle around the mode selector.

Mode 1

Move the jumper to connect pin1 and pin2. The pump will then run on the same supply as the calibration unit.

Mode 2

Move the jumper to connect pin2 and pin3. The pump will then run on the supply attached to VCC connector. Input can be between any voltage that is specified for the connected pump. See pump datasheet for more details.

Connect the pump as shown on the picture. Select pump supply mode according to mode 1 or 2. Connect power supply to the calibration unit, green LED will go on. Main menu on the calibration unit will appear, see picture above. If power is connected to the calibration unit before the pump is connected or powered. The LCD will show “Waiting for pump” until the pump is connected or supply for pump is turned on.

Frequency

At startup, the last stored frequency setting will appear.

This value can be adjusted between 10 to 255. 10 corresponds to the highest frequency and 255 to the lowest. This value is controlled by the UP and DOWN buttons. Make sure that the arrow is in front of frequency. Press ENTER to store the frequency into the pump. The value that is programmed into the pump is stored in the eeprom of the pump, so you can disconnect the pump and the setting will remain in the pump.

Stop

Move the control arrow with the SELECT button to Stop command and press ENTER, the pump now stops.

Reset:

Move the control arrow with the SELECT but to Reset command and press ENTER, the pump now Resets and starts pumping.

TROUBLE SHOOTING

If the LCD shows “communication failure”:

-Control if pump is connected properly.

If the LCD shows “Waiting for pump” even though the pump is connected:

-Restart the calibration unit with the pump connected to the unit.

If the pump don't start when using mode 2 for the power supply:

-Check that VCC for pump and that the 12 VDC for calibration unit has common Ground.

-Control that the jumper is in the right position.

Information furnished is believed to be accurate and reliable. However, Xavitech assumes no responsibility for the consequences of use of such information nor for any infringement of patents or other rights of third parties which may result from its use. No license is granted by implication or otherwise under any patent or patent rights of Xavitech. Specifications mentioned in this publication are subject to change without notice. This publication supersedes and replaces all information previously supplied. Xavitech products are not authorized for use as critical components in life support devices or systems without express written approval of Xavitech.

© 2015 Xavitech - All Rights Reserved

Flow calibration unit for BLACK edition pumpsS0506

XAVITECH AB. INDUSTRIGATAN 17. 871 53. HÄRNÖSAND. SWEDEN. TELEPHONE +46 (0) 611 55 61 00. E-MAIL: XAVITECH@XAVITECH.COM